

## Instructions

---

 
### General Navigation

To call up a new model, click on  in the menu bar.

A drop-down menu will then appear, giving you the options of two different stations, a chair or a cabin.




The selected model is highlighted in blue; if the model is inactive, the button is gray.



(Note: Depending on screen resolution, this may only be visible if the design menu is closed.)  
Once you have logged in, it is also possible to upload your own backgrounds.


Chair, cabin and station can be rotated through 360°, as required. Simply hold down the left-hand mouse button and drag the element to the required position. The mouse wheel can be used to zoom in and out.

To access the design menu, click on  at the right-hand edge of the screen.


The selected elements will be marked with a .

Several designs are already available to view under .

To delete a model, click on the active (blue) model icon, select 'delete' and then 'delete' again to confirm.

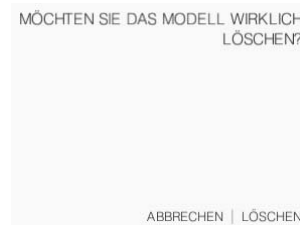

In the design menu, you can now configure the various elements of the station, chair or cabin. Select the required element in the menu – the color options can also be accessed by clicking on the required detail in the graphic itself. The selected color is indicated by a tick in the color selection window.

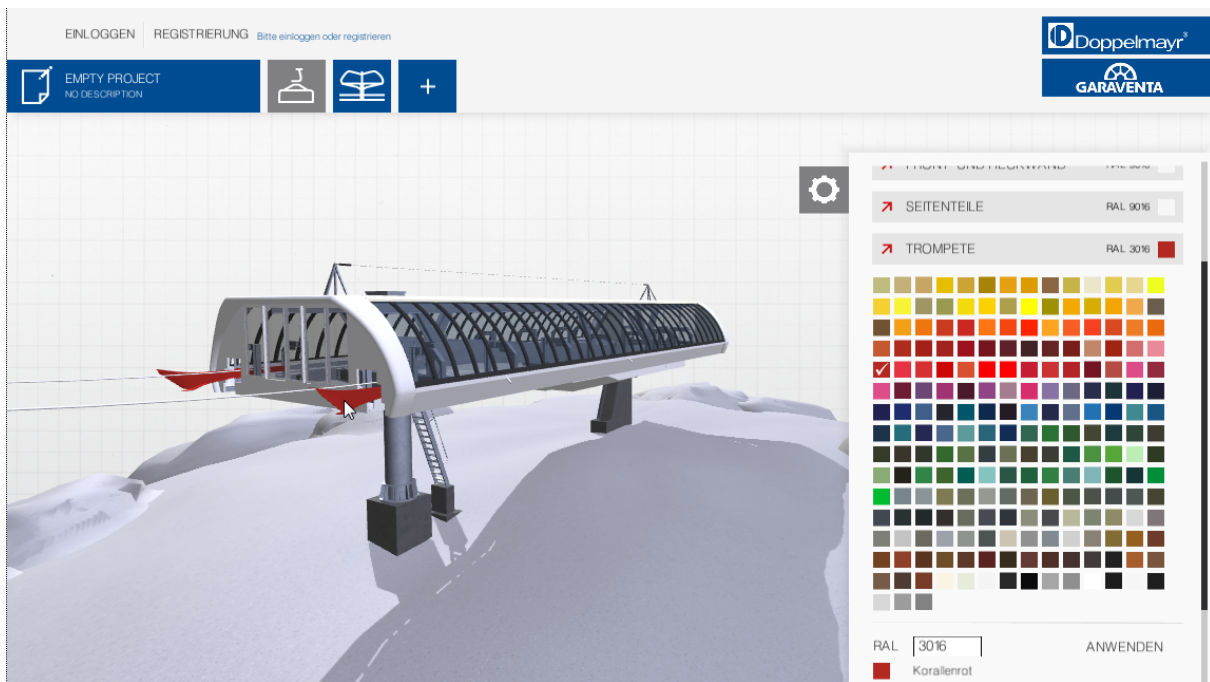

## Station

The following elements can be configured in the design menu for the station:

- BLENDE
- DACHRINNE
- FRONT- UND HECKWAND
- SEITENTEILE
- TROMPETE
- UMRANDUNG
- UNTERSCHT
- GLAS

## Chair

The following elements can be individually configured in the design menu for the chair:

- BUBBLEFARBE
- KOPFSTÜTZE 1/3/5
- KOPFSTÜTZE 2/4/6
- SEITENSTREIFEN
- POLSTERFARBE 1/3/5
- POLSTERFARBE 2/4/6
- SITZTEILER


To configure the chair upholstery, it is advisable to first open the bubble. This is done by clicking the button “Start Animation” in the design menu. As soon as the bubble has opened, click again to stop the animation.




## Cabin

The following elements can be configured in the design menu for the cabin:

- KABINENFARBE
- BODEN
- FENSTER
- SITZBANK
- ZUSATZELEMENTE

To configure the cabin interior, click on  at the bottom right-hand edge of the screen (Note: This button may only be visible when the design menu is closed) or use the animation as in the case of the chair. This is done by clicking the button “Start Animation” in the design menu. Stop the animation by clicking again once the door has opened.

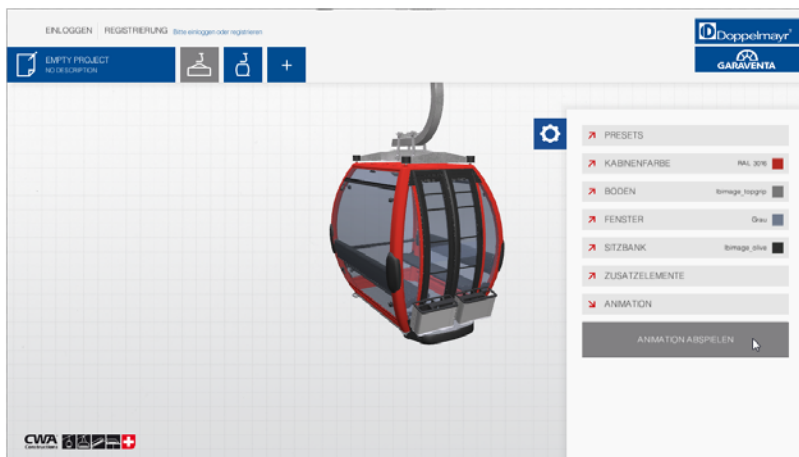

## Additional Functions in the Login Section

To register, click on the respective button in the top left-hand corner of the screen:




Complete the short form shown below. You will then be sent a confirmation mail enabling you to activate your user account.




Once you have registered for the Doppelmayr Ropeway Configurator and logged in, the following additional options are available to you:

### Upload background:

You can upload your own backgrounds for all models. To do this, open the design menu and click the button "Background" to access the drop-down menu.

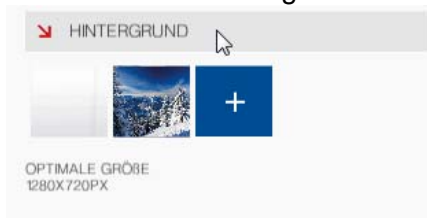

Clicking '+' followed by 'Select Image' takes you to a dialog box where you can individually upload the image you require.

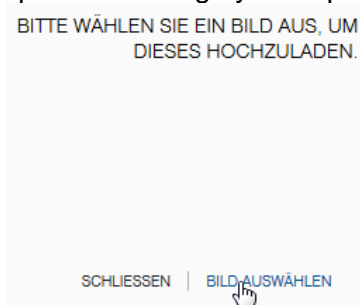

### Add Logo:

The cabin menu enables you to position a logo. Doppelmayr and Garaventa are already installed; other logos can be uploaded manually.

The supported formats are PNG (including transparency) and JPG with a maximum size of 2000x2000 pixels.

